


PL-E PRO Mechanical Switch Instruction

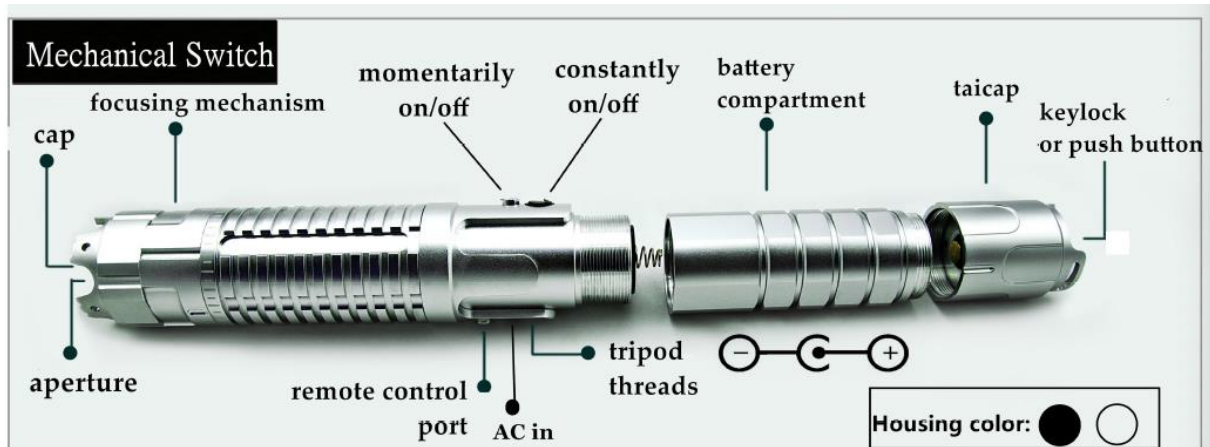

1. Load Batteries: Load "-" negative end of battery first.
2. Switch on the Tail Switch: There are two options of tail switches, one is the Keylock Switch, the other is the Simple Button Switch.
 - 2-1: The Keylock Switch: Turn into the keylock on tailcap with the key Clockwise, the LED indicator will turn on.
 - 2-2: Simple Button Switch: Depress the button on the tailcap, the LED indicator for the power supply will turn on.
- 3: Turn the Beam On
 - 3-1: Constantly On/Off Button: the lower button
Depress Constantly On/Off Button, the beam is on.
— Depress it again, the beam is off.
 - 3-2. Momentarily On/Off Button: the upper button
— Depress the Momentarily On/Off Button, the beam is on.
Loosen the press, the beam is off.
4. Switch the Beam Off
Press the Constantly on/off button to turn the beam off. — Switch the beam off at any state by pressing the tail power switch.
5. *Focusing mechanism*: you can focus/defocus the beam or adjust the beam size by tuning the focusing mechanism clockwise or anti-clockwise.

Be alert that there is a limit to the route of focusing mechanism, so when you cannot turn it further in one direction, it means it is the end of the route; please don't overturn it otherwise it might damage the mechanism.
6. The extension is included to run some wavelengths of lasers on two 18650 batteries. We also include two small magnets in case you are using two flat top 18650 batteries. You can attach one small magnet to the positive end of the battery so as to make sure two flat top batteries are in good contact.
7. Run the laser on AC adapter: AC adapter is also called power adapter because it converts AC power from a wall jack. PL-E Pro lasers can run on AC adapter either with or without batteries loaded To use it, plug the AC cord into a DC wall socket and then connect the DC end of the adapter to the DC socket on your PL-E Pro lasers. The Led will be turned on.